




TYRE-INFLATOR ADAPTOR

USE YOUR TRACTOR'S OWN AIR SUPPLY TO INFLATE YOUR TYRES

A handy adaptor for connecting a tyre inflator to a tractor's air supply, for use when an air compressor is not available. Just push the adaptor into the tractor's EMERGENCY air brake coupling, and connect your tyre inflator hose to the quick-release coupling at the other end of the adaptor.

Suitable for tractors fitted with "C" type air brake couplings.

Adaptor Part No. **ETTI 001**

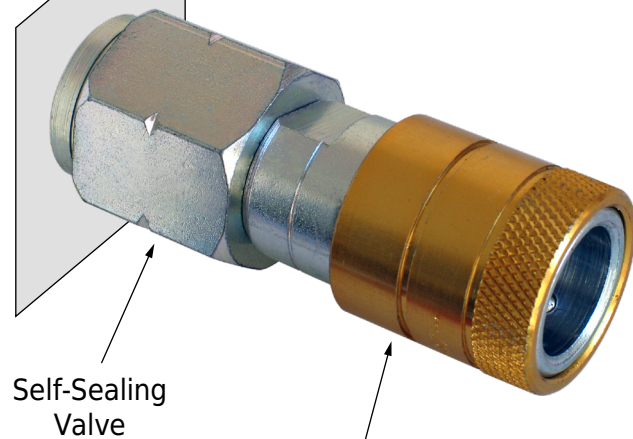

Self-Sealing Valve

Tractor Emergency Coupling

Tyre-Inflator Adaptor
Part No. **ETTI 001**

Quick-Release Airline Connector

Tyre-Inflator Hose

For further information, please contact our technical department:
Erentek Ltd., Malt Kiln Lane, Waddington, Lincoln LN5 9RT
Telephone: **01522 720065** Fax: **01522 729155**
Email: **sales@erentek.co.uk** Web: **www.erentek.co.uk**