

**Hydraulic Load-Sensing Valve Kit**  
Kit Part Number: **ETK007**

Mounting Bracket (multi-position, can be fitted to the left of valve, as shown, to the right, or below valve)  
*In ETK007 Kit*

Hydraulic Fittings and Test Points  
*In ETK007 Kit*

Large Bracket  
Qty 2 in ETK008 Kit

Cable clamp fits on to lever-arm.

Hydraulic Load-Sensing Valve with Lever-Arm  
*In ETK007 Kit*

Cable-and-Spring Linkage Assembly  
*In ETK007 Kit*

The threaded end (A) of the linkage assembly is attached to a bracket welded to the centre of the trailer axle (single-axle or tri-axle), or to the centre of a balance-beam between the two axles (tandem-axle). ETK008 kit contains the necessary parts\* for balance-beam installation.

\* Note - The balance-beam itself is not included in the ETK008 kit as it usually needs to be fabricated on-site.

**For more information about installing and setting up a hydraulic load-sensing valve please contact our technical department on 01522 720065**

A

EBRK 1178-1

EBRK 1178-2

EBRK 1178-1

Small Bracket - for welding to axles  
Qty 2 in ETK008 Kit

Metal/Rubber Bobbin  
Qty 4 in ETK008 Kit

**Tandem-Axle Load-Sensing Linkage Installation Kit**  
Kit Part Number: **ETK008**